

P0803557-00

greenworks

2937407AU

P0803557-00 Rev B

EN BLOWER ATTACHMENT OPERATOR MANUAL



PAC462

Greenworks Australia
A Division Jak Max P/L
380 Foley's Road Derrimut
Victoria, Australia 3026
www.greenworksaustralia.com

210

145

SCALE:A5

说明书技术要求:

1. 材质要求: 60g双胶纸, 8P
2. 说明书为单色印刷, 保持色块始终朝外;
3. 骑马钉, 裁切均匀、无连页。
4. 说明书可封样、要求无色差、无污点。
5. 料件需符合格力博HSF文件(编号: GLB-CGR-146) 里关于环保和有害物质的具体要求。

版本号

B

重要度等级

B

日期

					说明书				常州格力博集团	
标记	处数	更改文件号	签名	日期	阶段标记		视角标记	重量	比例	2937407AU
设计	张君	标准化	王小妮		S	A	B			
校对	杨媛									
审核	周艳	批准	李海平							ERP号
		日期	21.04.14		共 1 张		第 1 张		P0803557-00	

greenworks

2937407AU

P0803557-00 Rev B

EN

BLOWER ATTACHMENT

OPERATOR MANUAL



PAC462

**Greenworks Australia
A Division Jak Max P/L
380 Foley's Road Derrimut
Victoria, Australia 3026**

www.greenworksaustralia.com


1	Description.....	2	7	Recycle.....	5
1.1	Purpose.....	2	8	Installation.....	5
1.2	Overview.....	2	8.1	Connect power head to lower shaft assembly.....	5
2	Introduction.....	2	9	Operation.....	5
2.1	Residual risks.....	2	9.1	Operation tips.....	5
3	General power tool safety warnings.....	2	10	Maintenance.....	5
3.1	Training.....	2	10.1	Clean the machine.....	5
3.2	Preparation.....	2	11	Transportation and storage.....	5
3.3	Maintenance.....	3	11.1	Store the machine.....	5
4	Blower safety warnings.....	3	12	Troubleshooting.....	6
5	Symbols on the product.....	4	13	Technical data.....	6
6	Risk levels.....	4	14	Warranty.....	6

1 DESCRIPTION

1.1 PURPOSE

The machine is used to propel air out of a tube to move unwanted materials such as leaves in the yard.

1.2 OVERVIEW

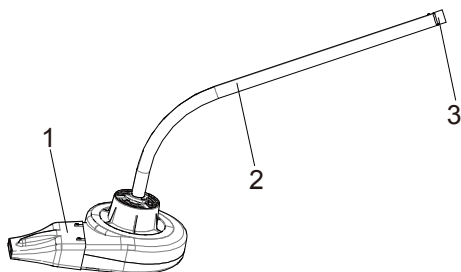

1 Blower attachment 3 Rubber protector
 2 Lower shaft

2 INTRODUCTION

Your product has been engineered and manufactured to high standards for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of rugged, trouble-free performance.

2.1 RESIDUAL RISKS

Even when using the power tool properly, remaining risks may exist. The following hazards may occur based on the construction of the equipment:

- Lung damage when not wearing a suitable protective mask.
- Hearing damage when not wearing suitable ear protection.
- Hand/arm damage due to vibration when you use the equipment for extended periods, or the machine is not properly operated and maintained.

3 GENERAL POWER TOOL SAFETY WARNINGS

▲ WARNING

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your battery-operated (cordless) power tool.

3.1 TRAINING

- Read the instructions carefully. Be familiar with the controls and the correct use of the machine.
- Never allow children, persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge or people unfamiliar with these instructions to use the machine. Local regulations can restrict the age of the operator.
- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

3.2 PREPARATION

- While operating the power tool always wear substantial footwear and long trousers. Do not operate the power tool when barefoot or wearing open sandals. Avoid wearing clothing that is loose fitting or that has hanging cords or ties.
- Thoroughly inspect the area where the power tool is to be used and remove all objects

which can be thrown by the power tool.

- Before using, always visually inspect to see, that fasteners are secure, the housing is undamaged and that guards are in place.
- Never operate the machine while people, especially children, or pets are nearby.
- Obtain ear protection and safety glasses. Wear them at all times while operating the machine.

3.3 MAINTENANCE

- Keep all nuts, bolts and screws tight to be sure the power tool is in safe working condition.
- Always allow the power tool to cool down before storing.
- Maintain the machine with care and keep it clean. Do not touch moving hazardous parts until the battery is removed and the moving hazardous parts have come to a complete stop.
- Allow the machine to cool before making any inspections, adjustments, storing etc.

- Replace worn or damaged parts for safety. Use only genuine replacement parts and accessories.


4 BLOWER SAFETY WARNINGS









- Operate the appliance only in daylight or in good artificial light.
- Keep all cooling air inlets clear of debris.
- Never blow debris in the direction of bystanders.
- Before starting the machine, make certain that the tube inlet is empty.
- Keep your face and body away from the air intake opening.
- Do not allow hands or any other part of the body or clothing inside the tube inlet, discharge chute, or near any moving part.
- Inspect unit to ensure no foreign material/ debris is in the machine prior to operation.
- Never operate the machine with defective guards or shields, or without safety devices or if the cord is damaged or worn.

- Do not overreach. Keep balance at all times, and always be sure of the footing on slopes. Walk, never run.
- Stop the machine and remove the battery pack. Make sure that all moving parts have come to a complete stop,
 - whenever the machine is left by the user
 - before clearing a blockage
 - before checking, cleaning or working on the machine
 - after striking a foreign object to inspect the machine for damage
- If the machine starts to vibrate abnormally,
 - inspect for damage
 - replace or repair any damaged parts
 - check for and tighten any loose parts

5 SYMBOLS ON THE PRODUCT




Some of the following symbols may be used on this tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and safer.

Symbol	Explanation
	Read operator's manual.

Symbol	Explanation
	Keep bystanders away.
	Wear eye and ear protection.
	Do not expose the product to rain or moist conditions.
	Keep all bystanders at least 15m away.
	Do not touch the fan when you operate this machine.
	Failure to keep loose clothing from being drawn into air intake could result in personal injury.
	Failure to keep long hair away from the air inlet could result in personal injury.
	Rotating impeller blades can cause severe injury.

6 RISK LEVELS

The following signal words and meanings are intended to explain the levels of risk associated with this product.


SYM-BOL	SIGNAL	MEANING
	DANGER	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

7 RECYCLE

	<p>Separate collection. You must not discard with usual household waste. If it is necessary to replace the machine, or if it is no more use to you, do not discard it with household waste.</p>
	<p>Separate collection of used machine and packaging let you recycle materials and use them again. Use of the recycled materials helps prevent environmental pollution and decreases the requirements for raw materials.</p>
<p>Batteries</p>	<p>At the end of their useful life, discard batteries with a precaution for our environment. The battery contains material that is dangerous to you and the environment. You must remove and discard these materials separately at a location that accepts lithium-ion batteries.</p>

8 INSTALLATION

8.1 CONNECT POWER HEAD TO LOWER SHAFT ASSEMBLY

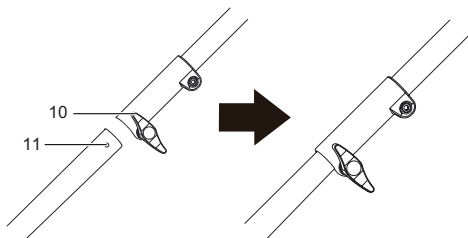

1. Remove the rubber protector (3).
2. Loosen the knob (10) on the coupler.
3. Push in the release button (11) located on the lower shaft. Align the release button with the positioning hole and slide the two shafts together. Rotate the lower shaft until the button locks into the positioning hole.
4. Tighten the knob securely.

i NOTE

If the button does not release completely in the positioning hole, the shafts are not locked into place. Slightly rotate from side to side until the button is locked into place.

9 OPERATION

9.1 OPERATION TIPS

- Blow around the outer edge of the unwanted materials to prevent the unwanted materials from scattering.

- Use rakes and brooms to clear the unwanted material before you blow.
- Make the surfaces wet before you clear the unwanted material in dusty conditions.
- Look out for children, pets, open windows, and cleaned cars during operation.
- Clean the machine.
- Discard the unwanted material when you complete work.

10 MAINTENANCE

▲ CAUTION

Do not let brake fluids, gasoline, petroleum-based materials touch the plastic parts. Chemicals can cause damage to the plastic, and make the plastic unserviceable.

▲ CAUTION

Do not use strong solvents or detergents on the plastic housing or components.

▲ WARNING

Remove the battery pack from the machine before maintenance.

10.1 CLEAN THE MACHINE

▲ CAUTION

The machine must be dry. Humidity can cause risks of electrical shocks.

- Clear the unwanted material out of the air vent with a vacuum cleaner.
- Do not spray the air vent or put the air vent in solvents.
- Clean the housing and the plastic components with a moist and soft cloth.

11 TRANSPORTATION AND STORAGE

▲ WARNING

Remove the battery pack from the machine before transportation and storage.

11.1 STORE THE MACHINE

- Clean the machine before storage.
- Make sure that the motor is not hot when you store the machine.
- Make sure that the machine does not have loose or damaged parts. If it is necessary, do these steps/instructions:
 - Replace the damaged parts.
 - Tighten the bolts.
 - Speak to a person of an approved service center.

- Store the machine in a dry area.
- Make sure that children cannot come near the machine.

12 TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The motor does not start when you pull the trigger.	The battery pack is not installed tightly.	Make sure that you tightly install the battery pack in the machine.
	The battery pack is out of power.	Charge the battery pack.
The machine does not start.	The power switch is defective.	Replace the defective parts by an approved service center.
	The motor is defective.	
	The PCB board is defective.	
The air does not flow through the tube when you start the machine.	The air inlet or tube outlet has a blockage.	Remove the blockage.

the date of purchase. This warranty covers manufacturing faults. A faulty product under warranty might be either repaired or replaced. A unit that has been misused or used in other ways than described in the owner's manual might be rejected for warranty. Normal wear, and wear parts are not considered as warranty. The original manufacturer warranty is not affected by any additional warranty offered by a dealer or retailer.

A faulty product must be returned to the point of purchase in order to claim for warranty, together with the proof of purchase (receipt).

13 TECHNICAL DATA

Weight (without battery pack)	3.3 lbs. (1.5 kg)
-------------------------------	-------------------

The recommended ambient temperature range:

Item	Temperature
Blower storage temperature range	32°F (0°C) - 113°F (45°C)
Blower operation temperature range	32°F (0°C) - 113°F (45°C)
Battery charging temperature range	39°F (4°C) - 104°F (40°C)
Charger operation temperature range	39°F (4°C) - 104°F (40°C)
Battery storage temperature range	32°F (0°C) - 113°F (45°C)
Battery discharging temperature range	32°F (0°C) - 113°F (45°C)

14 WARRANTY

(The full warranty terms and conditions can be found on Greenworks website)

The Greenworks warranty is 4 years on the product, and 2 years on batteries and chargers (consumer/private usage) from