


# greenworks

35062AU

EN

WORK LIGHT

OPERATOR MANUAL

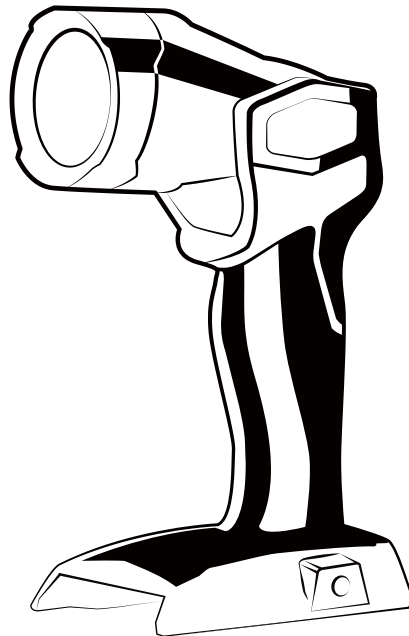

**E8038**

**35062a**

Greenworks Australia  
A Division Jak Max P/L  
380 Foley's Road Derrimut  
Victoria, Australia 3026

[www.greenworksaustralia.com](http://www.greenworksaustralia.com)


<b>1</b>	<b>Description.....</b>	<b>2</b>	<b>5</b>	<b>Installation.....</b>	<b>3</b>
1.1	Purpose.....	2	5.1	Unpack the machine.....	3
1.2	Overview.....	2	5.2	Install the battery pack.....	3
1.3	Packing list.....	2	5.3	Remove the battery pack.....	4
<b>2</b>	<b>General power tool safety</b>		<b>6</b>	<b>Operation.....</b>	<b>4</b>
	<b>warnings.....</b>	<b>2</b>	6.1	Start the machine.....	4
2.1	Work area safety.....	2	6.2	Stop the machine.....	4
2.2	Electrical safety.....	2	6.3	Adjust the angle.....	4
2.3	Personal safety.....	2	<b>7</b>	<b>Maintenance.....</b>	<b>4</b>
2.4	Battery tool use and care.....	2	7.1	Clean the machine.....	4
2.5	Service.....	2	<b>8</b>	<b>Technical data.....</b>	<b>4</b>
2.6	Specific safety rules.....	2	<b>9</b>	<b>Warranty.....</b>	<b>4</b>
<b>3</b>	<b>Symbols on the product.....</b>	<b>3</b>			
<b>4</b>	<b>Risk levels.....</b>	<b>3</b>			

## DESCRIPTION

### 1.1 PURPOSE

The machine is used to illuminate the work area.

### 1.2 OVERVIEW

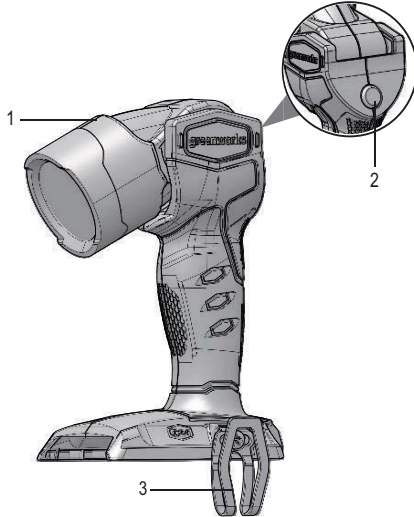

- |   |                   |   |           |
|---|-------------------|---|-----------|
| 1 | Articulating head | 3 | Belt clip |
| 2 | ON/OFF button     |   |           |

### 1.3 PACKING LIST

- |   |            |   |        |
|---|------------|---|--------|
| 1 | Work light | 3 | Manual |
| 2 | Belt clip  |   |        |

## 2 GENERAL POWER TOOL SAFETY WARNINGS

### ▲ WARNING

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your battery-operated (cordless) power tool.

### 2.1 WORK AREA SAFETY

- **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

### 2.2 ELECTRICAL SAFETY

- **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.

### 2.3 PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A lapse of attention while operating power tools may result in serious personal injury.
- **Use personal protection. Always wear eye protection.** Protective products such as dust mask, non-skid safety shoes, hard hat or hearing protection used appropriately will reduce personal injuries.
- **Do not over-reach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.

### 2.4 BATTERY TOOL USE AND CARE

- **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- **When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or fire.
- **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with plenty of soap and water. If liquid contacts eyes, immediately seek medical help. Liquid ejected from the battery may cause irritation or burns.**

### 2.5 SERVICE

- **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

### 2.6 SPECIFIC SAFETY RULES

- **Know your power tool. Read operator manual carefully.** Learn its applications and limitations, as well as the specific potential hazards related to this power tool. Obey this instruction will reduce shock, fire or serious injury.

- **Battery tools do not have to be plugged into an electrical outlet; thus, they are always in operating condition. Be aware of possible hazards when not using your battery tool or when changing accessories.** *Obey this instruction will reduce the risk of electric shock, fire, or serious injury.*
- **Do not place battery tools or their batteries near fire or heat.** *This will reduce the risk of explosion and possible injury.*
- **Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow.** *A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.*
- **Batteries can explode in the presence of a source of ignition, such as a pilot light. To reduce the risk of serious injury, never use any cordless product in the presence of open flame.** *An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.*
- **Do not charge battery tool in a damp or wet location.** *Obey this instruction will reduce the risk of electric shock.*
- **For best results, your battery tool should be charged in a location where the temperature is more than 50°F but less than 100°F.** *To reduce the risk of serious injury, do not store outside or in vehicles.*
- **Under extreme usage or temperature conditions, battery leakage may occur.** *If liquid comes in contact with your skin, wash immediately with soap and water. If liquid gets into your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention. Obey this instruction will reduce the risk of serious injury.*
- **Keep these instructions. Refer to them frequently and use them to instruct others who may use this tool.** *If you borrow someone this tool, loan them these instructions also to prevent incorrect use of the machine and possible injury.*




### 3 SYMBOLS ON THE PRODUCT

Some of the following symbols may be used on this tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and safer.

Symbol	Explanation
V	Volts
min	Minutes
$n_0$	No load speed
==	Direct Current

## 4 RISK LEVELS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYM-BOL	SIGNAL	MEANING
	DANGER	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

## 5 INSTALLATION

### 5.1 UNPACK THE MACHINE

#### ▲ WARNING

Make sure that you correctly assemble the machine before use.

#### ▲ WARNING

- If the parts are damaged, do not use the machine.
- If you do not have all the parts, do not operate the machine.
- If the parts are damaged or missing, speak to the service center.

1. Open the package.
2. Read the documentation in the box.
3. Remove all the unassembled parts from the box.
4. Remove the machine from the box.
5. Discard the box and package in compliance with local regulations.

### 5.2 INSTALL THE BATTERY PACK

Figure 2.

**▲ WARNING**

- If the battery pack or charger is damaged, replace the battery pack or the charger.
- Stop the machine and wait until the motor stops before you install or remove the battery pack.
- Read, know, and do the instructions in the battery and charger manual.

1. Align the lift ribs on the battery pack with the grooves in the battery compartment.
2. Push the battery pack into the battery compartment until the battery pack locks into place.
3. When you hear a click, the battery pack is installed.

**5.3 REMOVE THE BATTERY PACK**

Figure 3.

1. Push and hold the battery release button.
2. Remove the battery pack from the machine.

**6 OPERATION****▲ WARNING**

Do not use any attachments or accessories not recommended by the manufacturer of this product.

**6.1 START THE MACHINE**

Figure 4.

1. Push the on/off button.

**6.2 STOP THE MACHINE**

Figure 4.

1. Release the on/off button.

**6.3 ADJUST THE ANGLE**

Figure 5.

1. Turn the top head of the machine to adjust the light angle (0-135°).

**7 MAINTENANCE****▲ WARNING**

Remove the battery pack from the machine before maintenance.

**▲ WARNING**

Do not use strong solvents or detergents on the plastic housing or components.

**7.1 CLEAN THE MACHINE****▲ CAUTION**

The machine must be dry. Humidity can cause risks of electrical shocks.

- Clear the unwanted material out of the air vent with a vacuum cleaner.
- Do not spray the air vent or put the air vent in solvents.
- Clean the housing and the plastic components with a moist and soft cloth.

**8 TECHNICAL DATA**

Voltage	24 V
Lumens	220 lm
Run time (2 Ah)	Up to 20 hours
Rotation angle	135°
Weight without battery	0.27 kg
Battery model	29842 and other BAG series
Charger model	29862 and other CAG series

**9 WARRANTY**

(The full warranty terms and conditions can be found on Greenworks webpage)

The Greenworks warranty is 4 years on the product, and 2 years on batteries (consumer/private usage) from the date of purchase. This warranty covers manufacturing faults. A faulty product under warranty might be either repaired or replaced. A unit that has been misused or used in other ways than described in the owner's manual might be rejected for warranty. Normal wear, and wear parts are not considered as warranty. The original manufacturer warranty is not affected by any additional warranty offered by a dealer or retailer.

A faulty product must be returned to the point of purchase in order to claim for warranty, together with the proof of purchase (receipt).