


greenworks®

**OVG90002
(KC301)**

EN

JR. ADVENTURE SERIES

 OPERATOR MANUAL

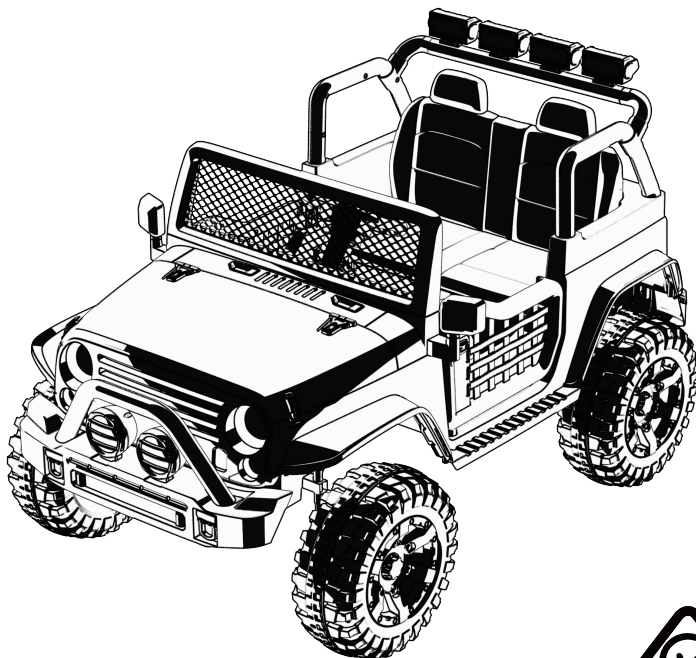

E8038

Greenworks Australia
A Division of Jak Max P/L
380 Foley's Road Derrimut
Victoria, Australia 3026

www.greenworksaustralia.com

1	Introduction.....	2	4	Operation.....	12
1.1	Product description.....	2	4.1	Before driving.....	12
1.2	Intended use.....	2	4.2	Start the product.....	13
1.3	Overview	2	4.3	Light on/off.....	14
1.4	Hardware list (not actual size).....	3	4.4	Steering wheel.....	15
1.5	Symbols on the product.....	4	4.5	Music player.....	15
2	Safety.....	4	4.6	Stop the product.....	15
2.1	Safety definitions.....	4	4.7	Remote Controller.....	16
2.2	Important safety instructions.....	4	5	Maintenance.....	17
2.3	FCC statement.....	6	5.1	Clean the product.....	17
3	Assembly.....	6	5.2	Clean the battery and battery charger...	17
3.1	Install the front bumper.....	6	6	Transportation, storage, and disposal.....	17
3.2	Install the front & rear fenders.....	7	6.1	Transportation.....	17
3.3	Install the front wheel shaft.....	7	6.2	Storage.....	18
3.4	Install the front wheel.....	8	6.3	Disposal of the battery, battery charger, and product.....	18
3.5	Install the rear wheel.....	8	7	Troubleshooting.....	18
3.6	Install the front roll bar.....	9	8	Technical data.....	18
3.7	Install the steering wheel.....	9	9	Limited warranty.....	19
3.8	Install the windshield & sideview mirror.....	10			
3.9	Install the light bar.....	10			
3.10	Install the motor connector & seat.....	11			

1 INTRODUCTION

1.1 PRODUCT DESCRIPTION

This product is a battery-operated kid car with two electric motors.

 
We have a policy of continuous product development and therefore reserve the right to modify the design and the appearance of the products without prior notice.

1.2 INTENDED USE

This is a recreational vehicle designed for driving on flat surfaces. Please check and consult your local state or territory laws and regulations on where you may operate this vehicle.


1.3 OVERVIEW

Kid car

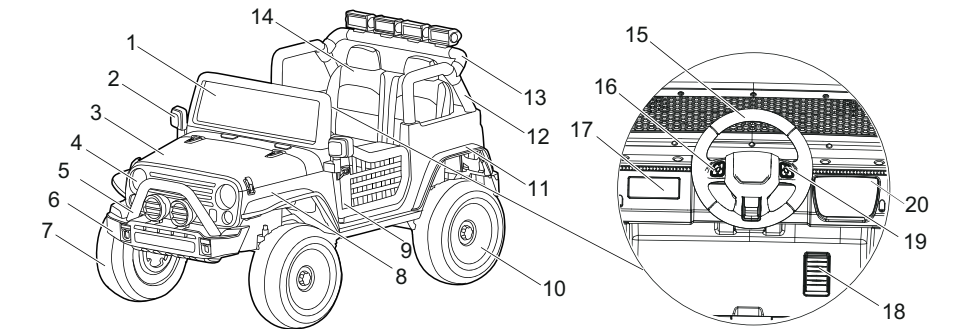

- | | | | |
|----|-----------------|----|---------------------|
| 1 | Windshield | 11 | Rear fender |
| 2 | Sideview mirror | 12 | Light bar support |
| 3 | Hood | 13 | Light bar |
| 4 | Headlight | 14 | Seat |
| 5 | Front roll bar | 15 | Steering wheel |
| 6 | Front bumper | 16 | Horn button |
| 7 | Front wheel | 17 | Music control panel |
| 8 | Front fender | 18 | Foot pedal |
| 9 | Car door | 19 | Music switch button |
| 10 | Rear wheel | 20 | Control panel |

 Control panel

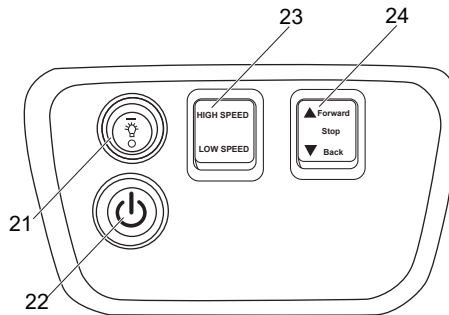

21 Light switch
22 Power button

23 Speed switch
24 Gear switch

1.4 HARDWARE LIST (NOT ACTUAL SIZE)

Toolkit

Name	Quantity	Picture
Spanner	2	

Installation bag

Name	Quantity	Picture
M5 x 45 mm screw	1	
M5 nut	1	
Ø4x12 mm screw	45	
Ø12 washer	2	
Ø10 washer	4	
Lock nut	4	

1.5 SYMBOLS ON THE PRODUCT

Symbol	Explanation
V	Volts
A	Amperes
Hz	Hertz
Wh	Watt Hour
Ah	Amp Hour
---	Direct current
	Do not expose to rain or use in damp locations.
	Read instructions thoroughly before operating the product and follow all warnings and safety instructions.
	Important safety precautions
	High voltage hazard
FC	FCC rules

2 SAFETY

2.1 SAFETY DEFINITIONS

Warnings, cautions, and notes are used to point out especially important parts of the manual.

⚠ WARNING

THERE IS A RISK OF INJURY OR DEATH FOR THE OPERATOR OR BYSTANDERS, IF THE INSTRUCTIONS IN THE MANUAL ARE NOT OBEYED.

⚠ CAUTION

THERE IS A RISK OF DAMAGE TO THE PRODUCT, OTHER MATERIALS, OR THE ADJACENT AREA, IF THE INSTRUCTIONS IN THE MANUAL ARE NOT OBEYED.

Note: Used to give more information that is necessary in a given situation.

2.2 IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE USING THIS PRODUCT. FAILURE TO FOLLOW ALL INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, FIRE, AND/OR SERIOUS PERSONAL INJURY.

- Weight Limit 35 kg (77.16 lbs).
- This product is not suitable for children under 3 years.
- Adult assembly required.
- Not to be used in traffic.

⚠ WARNING

TO REDUCE THE RISK OF INJURY, ADULT SUPERVISION IS REQUIRED. NEVER USE ON ROADWAYS, NEAR MOTOR VEHICLES, ON OR NEAR STEEP INCLINES OR STEPS, SWIMMING POOLS OR OTHER BODIES OF WATER. ALWAYS WEAR SHOES, AND NEVER ALLOW MORE THAN ONE RIDER(S).

General safety warnings

- When using this product, basic precautions should always be followed, including the following:
- Read all the instructions before using the product.

- Verify that the product is secure while transporting.
- Store the product in a dry area that will prevent unauthorized use or damage. Keep out of the reach of children.
- If the labels on the product become defaced or start to lift off, contact customer service.
- Keep these instructions in a safe place for future reference. Refer to them often and use them to instruct other users. Anyone who uses this product must read these instructions carefully
- Maintain the product with care.

TO PREVENT FIRE AND ELECTRIC SHOCK:

- Only use Greenwork 24V batteries and chargers. Use of the wrong type of battery and charger could cause a fire or explosion.
- Greenworks 24V batteries are intended for use with other Greenworks 24V product. Greenworks 24V batteries are not intended for use with non 24V Greenworks product. Overheating, fire or explosion could occur.
- Never modify the electric circuit system. Alterations could cause a shock, fire or explosion.
- Do not allow any type of liquid on the battery or its components.
- Do not charge near heat or flammable materials. Charge in a well ventilated area only. Charge the battery in a dry area only.
- Do not open the charger. Exposed wiring and circuitry inside case may cause electric shock.
- Only adults may handle or charge the battery. Never allow children to handle or charge the battery.
- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Ensure the battery locks into place. Without proper battery installation the battery could fall out and injury a child if the product tips over.
- To prevent unintentional starting, ensure the power button is in the off-position before connecting the battery or picking up the product. Carrying the product with your hand or finger on the power switch could cause the product to unintentionally power on.
- Make sure the power button is off and the battery pack is removed before clearing jammed material, making adjustments, changing accessories, storing or servicing the product. Unexpected powering of the product while clearing jammed material or servicing may result in serious personal injury.
- Recharge only with Greenworks 24V chargers. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use product only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys,

nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help immediately. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or product that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or kid car to fire or excessive temperatures. Exposure to fire or temperature above 130°C (265°F) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or product outside of the temperature range specified in the instructions. Charging improperly or in temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the product or the battery pack (as applicable) except as indicated in the instructions for use and care.

▲ WARNING

TO ENSURE YOUR CHILD IS SAFE WHILE DRIVING, YOU MUST PAY ATTENTION TO THE FOLLOW WARNING:

- The assembly and adjustment of the product must be completed by an adult. Please keep children away from parts.
- Small parts are not suitable to be used by children under 3 years old.
- Children must use this product under the guidance of an adult, and the guardian must be in attendance at all times to reduce risk of injury.
- The children must be guided by adult, and the guardian can't leave during the use process.
- Don't allow the children to stand on the foot pedal or in this product.
- The battery must be charged by an adult. Please charge before using this product.
- Please keep the packaging materials (such as plastic bags) away from children as this creates a choking hazard.
- Strictly forbid using any accessories not provided by the manufacturer.

- The charger is not a toy and should not be used as a toy.
- The max loading of this product is 35 kg (77.16 lbs). Do not attempt to overload the product.
- The age range for this car: 3-8 years old.
- The product cannot be connected to more power than recommended.
- The product cannot be operated while charging.

Use notices

- Please check whether all parts are installed in place and tightly connected before use.
- Do not use in dangerous areas such as streets, roads, slopes or trenches.
- Please do not use it on smooth floors, such as marble floors. Do not use it on the ground with obstacles, such as floor tiles.
- Do not move the forward / backward switch while the product is running.
- Do not allow children to stand on the seat or sit on the roll bar light frame, or the side bar frame.
- Do not change the structure of electronic components related to the product such as the remote control.
- The remote control and the product cannot be used in rain or water. Please do not drip water or liquids on the car or remote control. Move the product and remote away from potential fire hazards.
- The product stops running when it encounters an obstacle. Please clear the obstacle before attempting to drive the product.
- Do not use indoors to avoid damage to furniture or household items.
- When the remote batteries are low, the kid car will shake for a short period. Please replace the battery in time.
- When the product is not in use, please turn off the power switch, and then remove the battery.
- This product is restricted to one person and cannot be overloaded.

SAVE THESE INSTRUCTIONS

2.3 FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits

are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3 ASSEMBLY

This section describes how to assemble and adjust the product.

▲ WARNING

 
CAREFULLY READ AND UNDERSTAND THE SAFETY CHAPTER AND THE ASSEMBLY INSTRUCTIONS BEFORE YOU ASSEMBLE THE PRODUCT.

3.1 INSTALL THE FRONT BUMPER


1. Turn the product upside down.

Note: Place a cardboard on floor, or use a soft surface to prevent scratching the product body.

2. Plug the connector on the front bumper into the terminal on the product body.
3. Attach the front bumper to the product body.

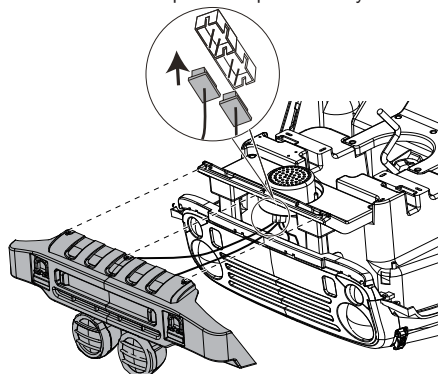


 4. Align the front bumper with screw holes of the product body.
5. Securely tighten five Ø4x12 screws with a screwdriver.

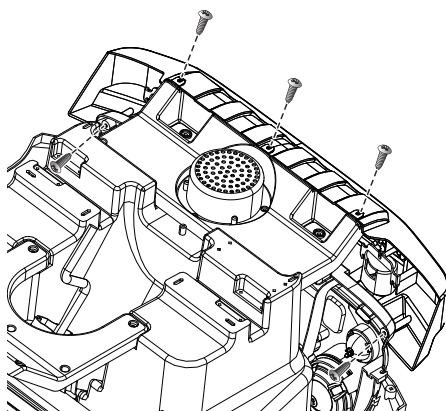


3.2 INSTALL THE FRONT & REAR FENDERS


 
1. Install the both front fenders on each side of the product body. R to R, L to L.

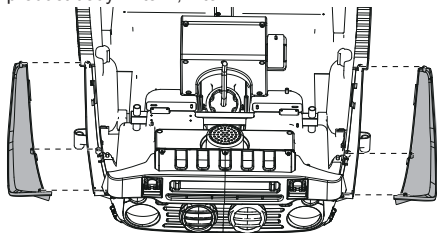

 2. Insert three Ø4x12 screws through the product body into the front fender, and tighten with a screwdriver.

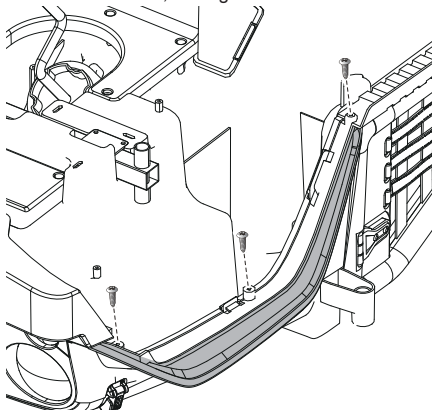


  3. Install the rear fenders in the same manner as the front fenders.

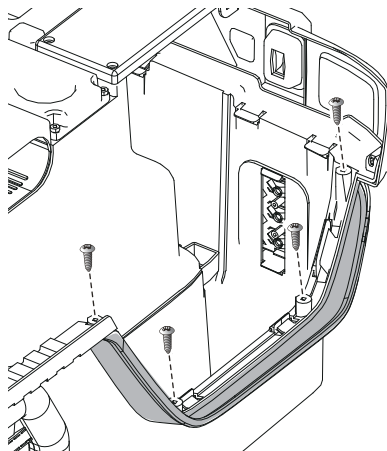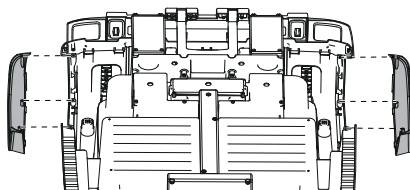


3.3 INSTALL THE FRONT WHEEL SHAFT

 
1. Rotate the front axle 180° as shown.

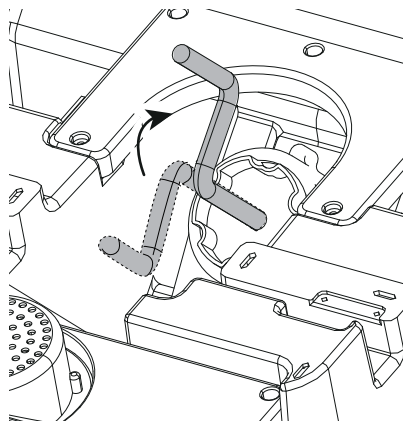

 
2. Place the front wheel shaft in the groove.

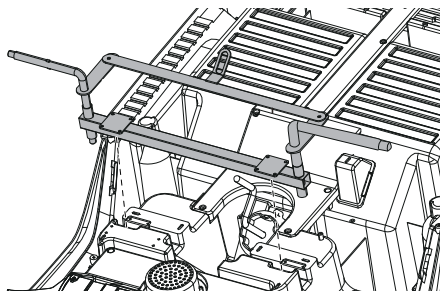

 Note: Make sure that the front axle goes through the hole at the center of the front wheel shaft.

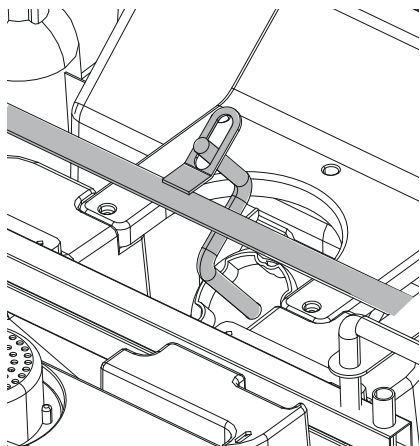


 3. Insert eight Ø4x12 screws and tighten them securely with a screwdriver.

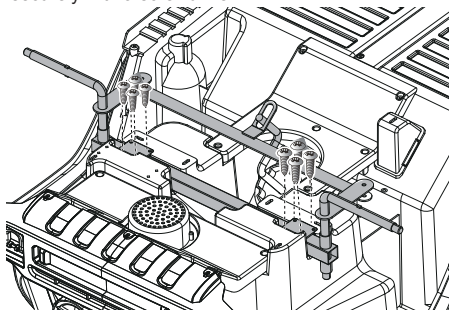

3.4 INSTALL THE FRONT WHEEL

 
1. Slide the Ø12 washer (a), front wheel, and Ø10 washer (b) onto the front axle in order.
2. Tighten a lock nut (c) to the end of the front axle with a spanner. DO NOT over-tighten.
3. Attach the hubcap (d) to the wheel.

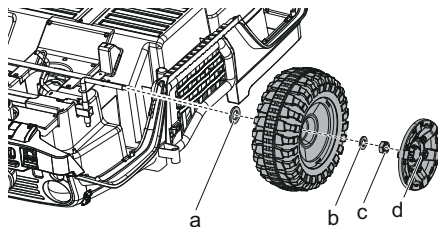


4. Repeat the above procedures to install the other front wheel.

3.5 INSTALL THE REAR WHEEL

 
1. Install the rear wheel house onto the product body.
2. Insert eight Ø4x12 screws and tighten them securely with a screwdriver.

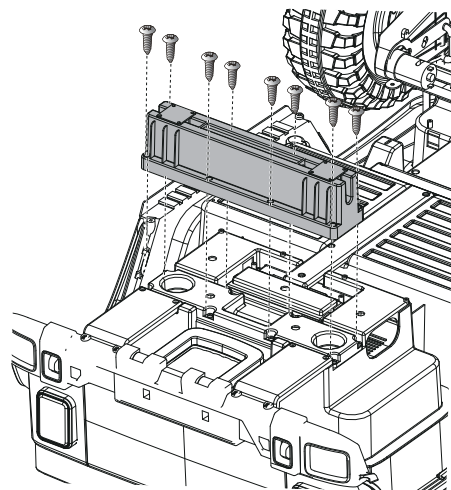

 
3. Insert the rear axle through the hole in the rear wheel house.

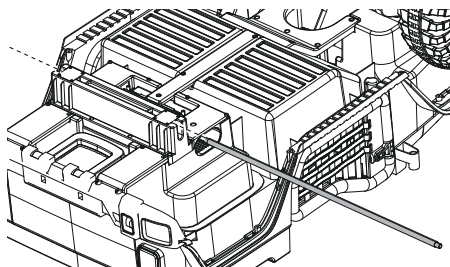

 
4. Install the wheel driver onto the rear wheel, and secure it with four Ø4x12 screws.

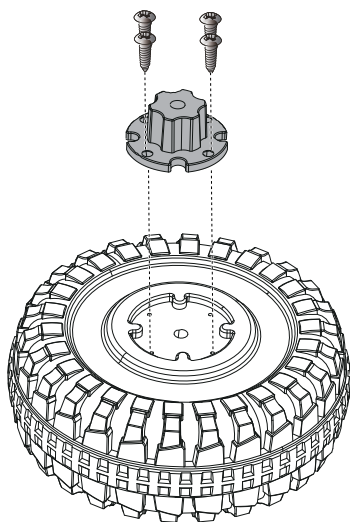

 5. Slide the gear box onto the rear axle.

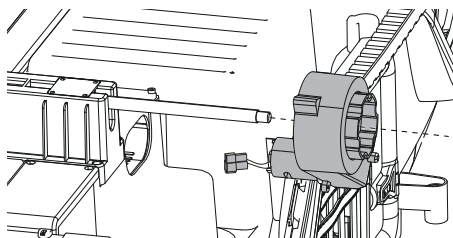

 
Note: Ensure the motor on the gear box passes through the hole in the product body.

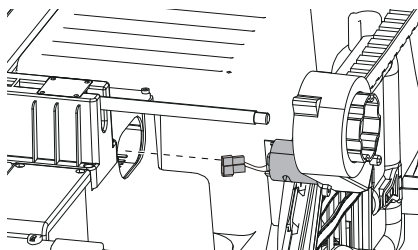

6. Slide the rear wheel, Ø10 washer (b) onto the rear axle in order.

Note: The gear part on the rear wheel should match up with the gear box.

 
7. Tighten the lock nut (c) to the end of the front axle with a spanner. DO NOT over-tighten.
8. Install the hubcap (d) to the wheel.

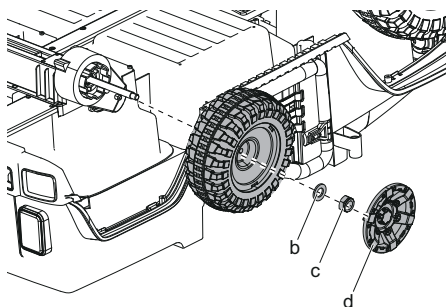

9. Repeat the 4-8 procedures to assemble the other rear wheel.


3.6 INSTALL THE FRONT ROLL BAR

 1. Turn the product body upright.
2. Install the front roll bar into the holes on the top of the front bumper.

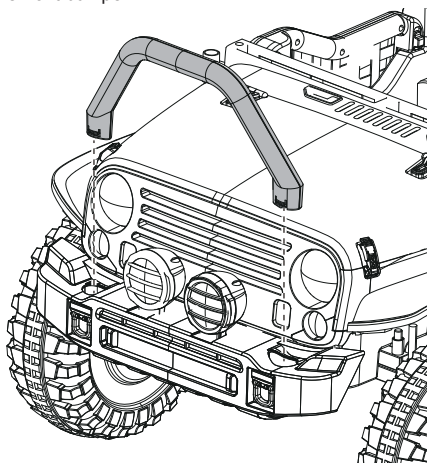

3.7 INSTALL THE STEERING WHEEL

 
1. Plug the sound connector on the steering wheel into the connector on the product body.

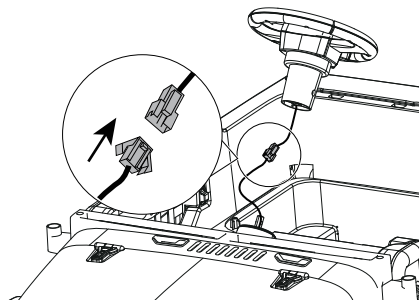

2. Insert the steering wheel to the end of the steering column.


Note: Be sure to tuck the wire in the steering wheel connector when inserting the steering wheel.

 3. Align the holes on the steering wheel with those on the steering column, and insert the M5x45 screw.
4. Fasten a nut on the opposite end of the screw with a screwdriver.

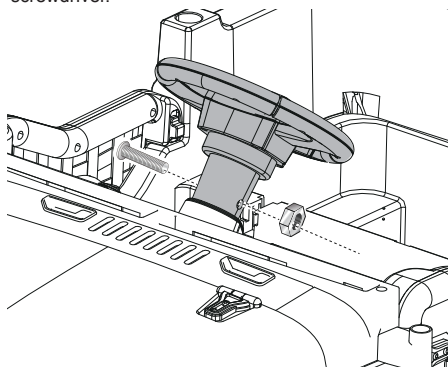


3.8 INSTALL THE WINDSHIELD & SIDEVIEW MIRROR

 1. Insert the tabs on the windshield into the grooves on the product body, and push until you hear it "click" into place.

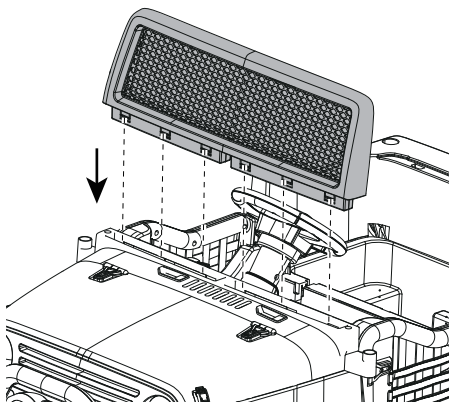


 2. Insert a sideview mirror into the hole on each side of the product body.

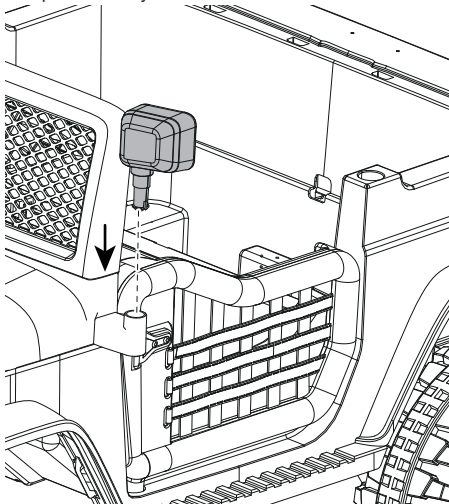


3.9 INSTALL THE LIGHT BAR

 
1. Plug the light connector into the connector on the light bar support R.

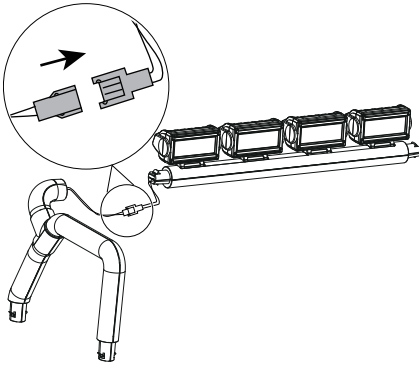

 2. Install the light bar supports to the light bar.

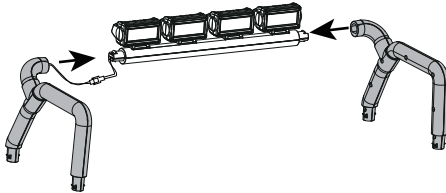


 3. Plug the connector on the light bar support into the connector in the product body.

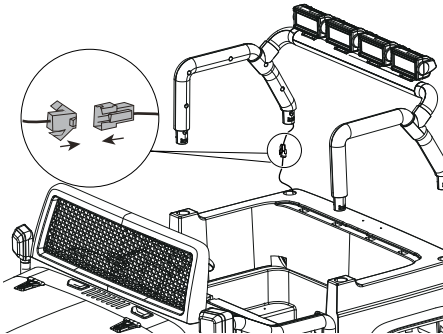


4. Insert the tabs on the light bar support into the holes, and push it until you hear a "click" as it locks into place.

 - Pay attention to the left and right frame and installation direction.
- Be sure to tuck the wire in the product body when inserting the light bar support.

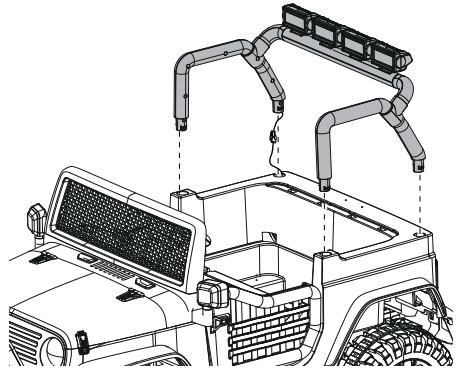


3.10 INSTALL THE MOTOR CONNECTOR & SEAT

 
1. Insert the motor connectors.

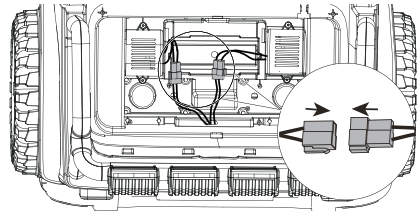

 
2. Insert the tabs on seat back into the holes on the product body.

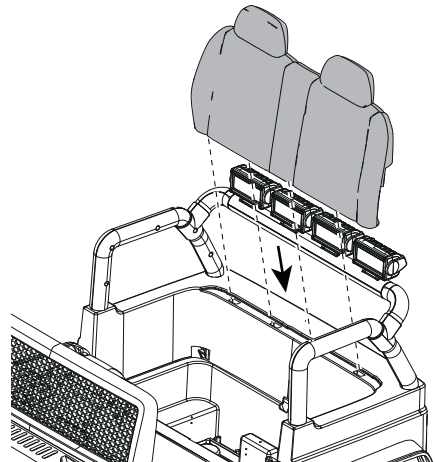

 3. Fit seat to the product body.

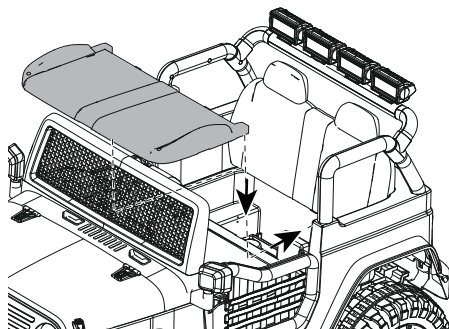

 4. Insert two Ø4x12 screws and tighten them securely with a screwdriver.

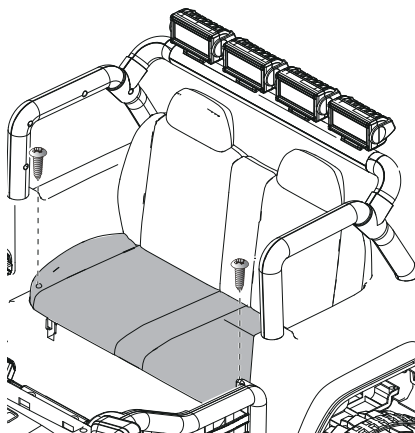

4 OPERATION

This section describes how to operate the product.

▲ WARNING

CAREFULLY READ AND UNDERSTAND THE SAFETY CHAPTER AND OPERATION INSTRUCTIONS BEFORE YOU OPERATE THE PRODUCT.

4.1 BEFORE DRIVING

4.1.1 PRE-DRIVE CHECKLIST

Make sure to check the condition of the product before each drive.

What to check	Check for
Pedal	• Ensure the pedal work properly. • Ensure pedal is not over worn and is correctly positioned.
Steering wheel	• Ensure the steering wheel is correctly adjusted and tightened, allowing for proper steering.
Tires	• Ensure tires have tread and have no bulges or excessive wear. • Ensure hubs have no obvious wobbles or kinks. • Check that axle nuts are tight. • Inspect for any cracks or leaks.

4.1.2 CONNECT THE BATTERY CHARGER

Connect the battery charger to the proper voltage and frequency that is specified on the rating plate.

Refer to the Battery & Charger Manual for information about how to use the battery charger.

4.1.3 CHARGE THE BATTERY

 
Refer to the Battery Charger Operator Manual for information about how to use the battery charger.

4.1.4 BATTERY INFORMATION


Refer to the Battery Operator Manual for information about how to use the battery.

4.1.5 CONNECT THE BATTERY TO THE PRODUCT

1. Unlock and open the hood.
Note: Loosen and remove the screws to open the hood for the first time.

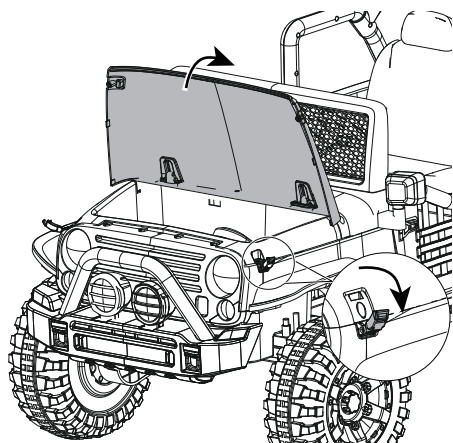

 2. Insert the battery into the battery compartment. The battery locks into position when you hear a click.

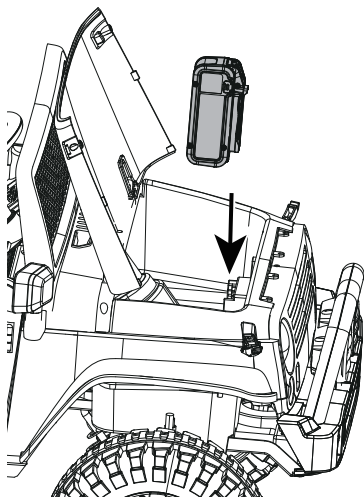

Note: In order to start the product, make sure that the battery is charged and properly inserted into the designated compartment.

3. Close and lock the hood.

4.1.6 ADJUST AND FASTEN THE SEAT BELT

▲ WARNING

 
DRIVING THIS PRODUCT WITHOUT PROPERLY FASTENED SEAT BELTS FOR THE OPERATOR AND PASSENGERS MAY INCREASE THE CHANCE OF INJURY. NEVER OPERATE OR ALLOW A PASSENGER TO DRIVE THIS PRODUCT WITHOUT PROPERLY FASTENING THE SEAT BELT.

Note: If there is no passenger in the passenger seat, make sure the seat belt on the passenger seat is locked together and secured.

1. Sit on the seat with your back against the backrest.
2. Position the belt above your waist. Adjust the length of the straps if necessary.
3. Lock the quick-release fastener by pushing it together.




4. Squeeze the hooks to open the quick-release fastener.

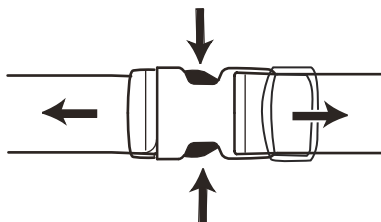


4.2 START THE PRODUCT

 
1. Press the power button to turn on the product.

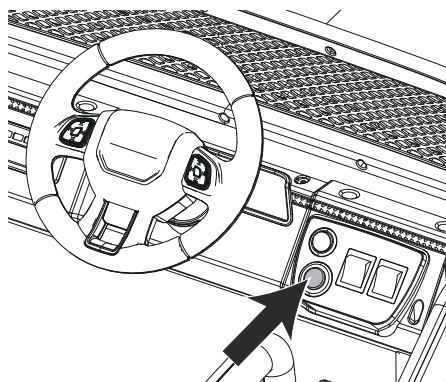

 
2. Set the gear shift switch to the "Forward" position.

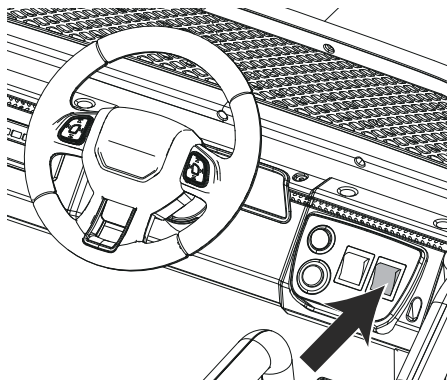

 
3. Press the pedal to activate the product.

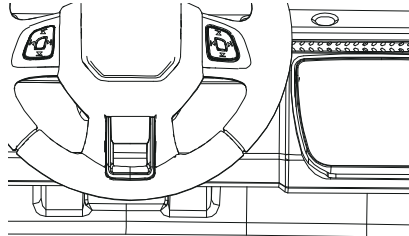

 4. Steer the product right or left by slightly turning the steering wheel.

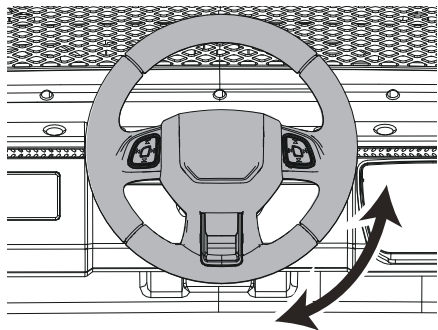


 5. Set the product in high or low speed by pressing the speed switch.

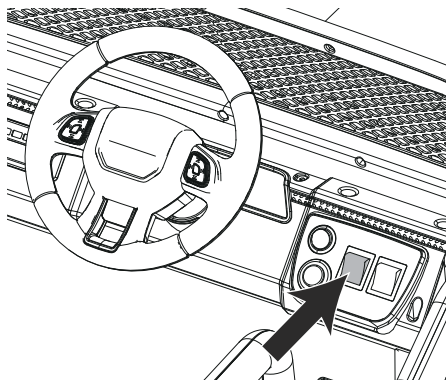


6. Decelerate or brake by releasing pressure from the pedal.

 7. Reverse by first stopping the product, then setting the gear shift switch to the "Back" position. Then lightly press the pedal to reverse.

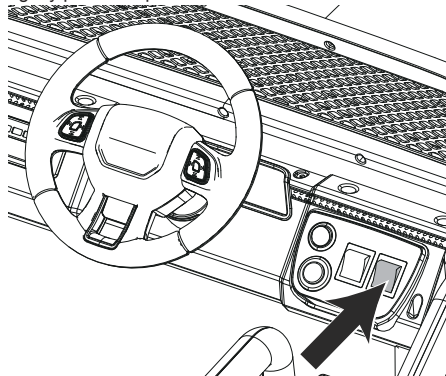


4.3 LIGHT ON/OFF

 1. Press the light switch to turn the light on or off.

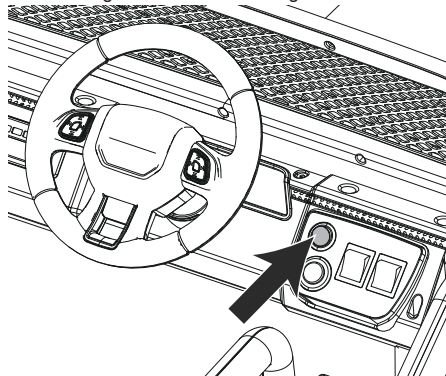


4.4 STEERING WHEEL

 - Press the left button, you can hear the horn.

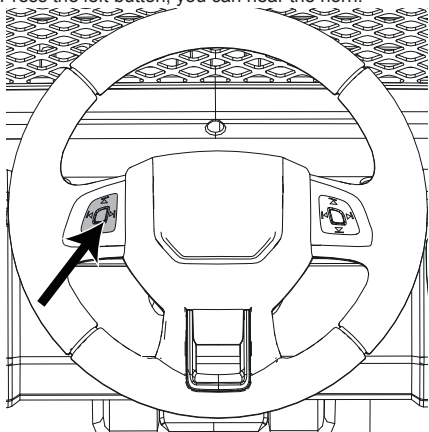


 - Press the right button, you can switch songs.

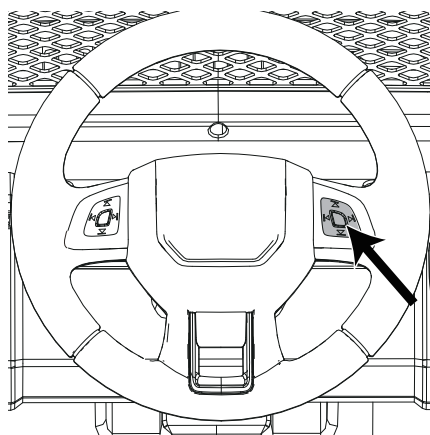

4.5 MUSIC PLAYER

 4.5.1 MUSIC PLAYER PANEL

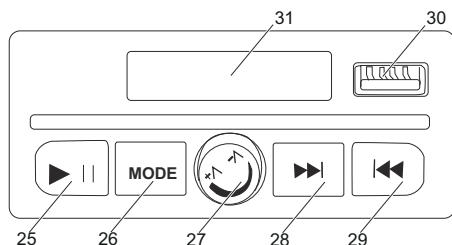


- 25 Play/Stop
- 26 Mode
- 27 Volume knob
- 28 Next music

- 29 Previous music
- 30 USB interface
- 31 LED screen

Note: Press "MODE" button to switch among FM mode, Wireless connection mode and USB mode.

 4.5.2 LED SCREEN

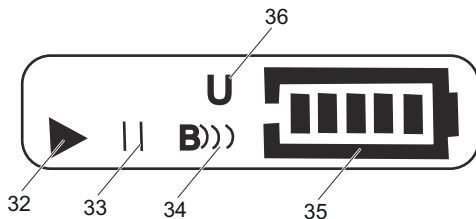

- 32 Music play indicator
- 33 Music stop indicator
- 34 Wireless connection indicator
- 35 Battery level
- 36 USB indicator

 

4.5.3 SPEAKER FUNCTION

With this product, you can enjoy music through your Wireless connection phone.

- Press the "MODE" button until wireless connection indicator lights up.
- Turn on the wireless connection function on your phone.
- Choose device TOY CAR to pair.
- Use your phone to control the music.


4.6 STOP THE PRODUCT

- Slightly release the pressure on the pedal until the product has completely come to a stop.
- Set the gear shift switch to the "Stop" position.

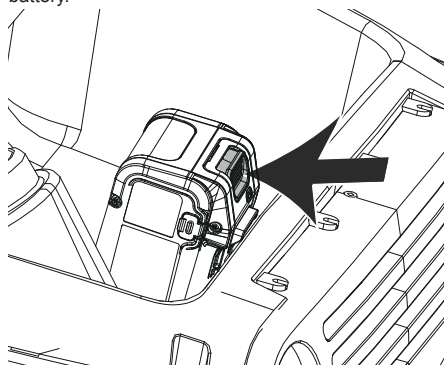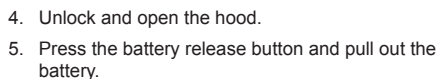

4.7 REMOTE CONTROLLER

 1. Loosen the screw and remove the cover of the remote controller.

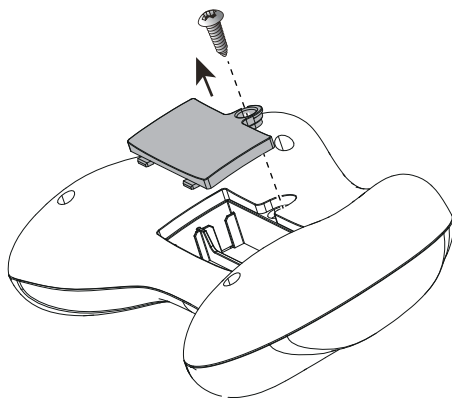

2. Install two AAA (1.5V) dry batteries (not included), and then tighten the screw.

Note:

 
- Batteries not included.
- Ensure the correct polarity (+/-) when installing the batteries.

⚠ WARNING

THE ABOVE STEPS SHOULD BE DONE BY ADULTS. DO NOT MIX OLD AND NEW BATTERIES OR DIFFERENT TYPES OF BATTERIES. THE EXHAUSTED BATTERY SHOULD BE TAKEN OUT IN TIME.

4.7.2 USE THE REMOTE CONTROLLER

This remote controller has a memory function which requires a one-time pairing to the product. There is no need to pair your remote each time the product is used, as it will remain paired even after replacing the batteries.

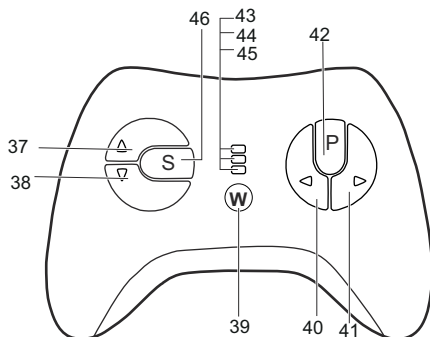

NO.	Name	Description
37	Forward button	/
38	Reverse button	/
39	Connection button	Press the button to build connection with the product.
40	Left button	/
41	Right button	/
42	Brake button	Press the button to stop the product, press it again to release the brake.
43	High speed indicator	/
44	Medium speed indicator	/
45	Low speed indicator	/
46	Speed select button	The switch operates the product to move in low, medium and high speed.

1. Turn on the product.
2. Press the connection button for 3 seconds, and the low speed indicator flashes.
3. If the low speed indicator stays solid, the connection is successful.

Note: If the low speed indicator has no response, it means that the connection has failed. Replace the batteries and retry.

Refer to the table for information on remote control.

Note:

- Leave the remote controller idle for about 10 seconds, it will shut down automatically.

5 MAINTENANCE

▲ CAUTION

CAREFULLY READ AND UNDERSTAND THE SAFETY REGULATIONS AND THE MAINTENANCE INSTRUCTIONS BEFORE YOU CLEAN, REPAIR, OR DO ANY MAINTENANCE ON THE PRODUCT.

▲ WARNING

- REMOVE BATTERY OR BATTERIES FROM THE PRODUCT BEFORE YOU DO ANY MAINTENANCE.
- DO NOT USE THIRD-PARTY REPLACEMENT PARTS OR MODIFYING/REMOVING COMPONENTS. IT CAN RESULT IN INJURY TO THE USER.
- RISK OF FIRE – NO USER SERVICEABLE PARTS

5.1 CLEAN THE PRODUCT

▲ CAUTION

- KEEP WATER AWAY FROM BATTERY COMPARTMENT WHILE WASHING TO AVOID DAMAGING THE ELECTRICAL COMPONENTS.
- DO NOT CLEAN WITH ALCOHOL, GASOLINE, ACETONE, OR OTHER CORROSIVE/VOLATILE SOLVENTS. THESE SUBSTANCES MAY DAMAGE THE EXTERNAL AND INTERNAL STRUCTURE OF YOUR PRODUCT.
- DO NOT RUB WITH SANDPAPER OR METAL BRUSH.

Clean the product after each use with water, neutral detergent, and a soft cloth.

5.2 CLEAN THE BATTERY AND BATTERY CHARGER

▲ WARNING

DO NOT CLEAN THE BATTERY OR THE BATTERY CHARGER WITH WATER.

- Make sure that the battery and the battery charger and battery compartment are all clean and dry before you insert the battery into the battery charger.
- Clean the battery terminals with a soft and dry cloth.
- Clean the surface of the battery and the battery charger with a soft and dry cloth.

6 TRANSPORTATION, STORAGE, AND DISPOSAL

6.1 TRANSPORTATION

- Any removable (electronic) parts, such as the charger and battery, should always be disconnected before transport.
- Avoid transporting the product in bad weather conditions.
- Make sure to adequately cover any exposed electronic parts if transportation in adverse weather conditions is unavoidable.

- Use tape on open contacts of the battery and ensure it is securely stowed to prevent movement.
- High speeds, along with wind and rain, may force moisture into the electronic components, which can lead to temporary malfunctions or permanent defects.
- In case of malfunction occurring after transport in such conditions, remove the battery and allow all parts to air-dry when you reach your destination.

6.2 STORAGE

1. Turn off the product and remove the batteries.
2. Thoroughly clean the product and then wax the painted parts with a non-abrasive automotive wax.
3. Inflate the tires with correct air pressure. Refer to *PRE-DRIVE CHECKLIST*.
4. Store the product in a covered shed or garage to protect it from dust, dirt and humidity. If the product must be stored outdoors, cover it completely with a waterproof cover.
5. Store the product in a safe place to prevent theft.

6.3 DISPOSAL OF THE BATTERY, BATTERY CHARGER, AND PRODUCT

Symbols on the product or the package of the product mean that the product is not domestic waste. Recycle it at a recycling station for electrical and electronic equipment. This helps to prevent damage to the environment and persons.

Greenworks Australia is a member of the B-Cycle Battery Recycling Program. Please dispose of your batteries responsibly and ethically. For more information on where to recycle your old batteries - please visit our website greenworksaustralia.com or ecobatt.net/drop-off-locations.

7 TROUBLESHOOTING

Problem	Possible Cause	Possible Solution
The product dose not work.	Low battery charge.	Charge the battery.
	The product has stopped working to protect internal circuits.	Turn off the product, wait for the product and battery to cool down, then start the product again.
	Battery is dead.	Replace the battery.
	Motor is damaged.	Contact the service center.
The product runs sluggishly	Battery is old.	Replace the battery.

Problem	Possible Cause	Possible Solution
	Product is overload. Product is being used in harsh conditions.	Reduce weight on the product. Avoid using the product in harsh conditions.
Difficult shifting from forward to reverse or vice-versa.	Attempting to shift while the product is motion.	Completely stop the product and shift.
Loud grinding or clicking noises coming from motor or gear box.	Motor or gears are damaged.	Contact the service center.

8 TECHNICAL DATA

Voltage	24V DC
Driver age	3-8 years old
Maximum speed limit	Low speed: 2.4 km/h
	Medium speed: 3.7 km/h
	High speed: 6.4 km/h
	Reverse speed: 3.1 km/h
Runtime	Low speed:150 minutes
	Medium speed:100 minutes
	High speed: 50 minutes
Charge time	220 minutes
Battery model	LBHPTC4 and other Greenworks 24V series batteries
Charger model	AC30W1C and other Greenworks 24V series chargers

The recommended ambient temperature range:

Item	Temperature
Product storage	32°F (0°C) - 113°F (45°C)
Product operation	32°F (0°C) - 113°F (45°C)
Battery charging	39°F (4°C) - 104°F (40°C)

Item	Temperature
Charger operation	39°F (4°C) - 104°F (40°C)
Battery storage	32°F (0°C) - 113°F (45°C)
Battery discharging	32°F (0°C) - 113°F (45°C)

9 LIMITED WARRANTY

This is a limited warranty provided by the manufacturer of the Greenworks Jr. Adventure Series (the "product") to the consumer or End Users (the "Limited Warranty"). This Limited Warranty only and exclusively applies to the Product distributed and/or sold by and/or through Greenworks or Greenworks Dealers.

THIS LIMITED WARRANTY GRANTS YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO BE ENTITLED TO ADDITIONAL RIGHTS WHICH VARY BETWEEN STATES OR COUNTRIES. THIS LIMITED WARRANTY IS A BINDING LEGAL CONTRACT BETWEEN YOU AND Greenworks AND Greenworks PARTIES (AS DEFINED BELOW). AND IT IS YOUR RESPONSIBILITY TO READ THIS ENTIRE LIMITED WARRANTY AND UNDERSTAND IT BEFORE USE OF THE PRODUCT.

▲ WARNING

USE OF THE PRODUCT BY A PERSON WHO HAS NOT RECEIVED SUFFICIENT PROFESSIONAL TRAINING AND DOES NOT POSSESS NECESSARY EXPERIENCE AND SKILLS MAY CAUSE SEVERE BODILY INJURY OR EVEN DEATH TO SUCH USER OR THE OTHERS. CONTACT DRIVER TRAINING FACILITIES AND ACQUIRE SAFETY DRIVING TRAINING, INSTRUCTIONS OR CERTIFICATIONS, IF ANY, BEFORE USE OF THIS PRODUCT ARE ENCOURAGED. PLEASE READ EACH AND EVERY SECTION OF THIS DOCUMENT CAREFULLY BEFORE USE OF THE PRODUCT. YOU ARE ENCOURAGED TO CONSULT A PROFESSIONAL REGARDING THE INFORMATION PRESENTED HEREIN, PARTICULARLY CONCERNING MATTERS RELATED TO SAFETY, AS WELL AS YOUR LEGAL LEGAL RIGHTS AND RESPONSIBILITIES.

LIMITED WARRANTY PERIOD

This Limited Warranty exclusively applies to defects related to the material or workmanship of the product and its components when they are used under normal conditions. In the event of a defect covered by this Limited Warranty, Greenworks, at its own discretion, will proceed to repair or replace the faulty product or components in accordance with the terms outlined in this Limited Warranty. The Limited Warranty Period begins on the date of the original purchase of the product from Greenworks, an authorized Greenworks reseller, distributor, or an authorized Dealer, all of which may be collectively referred to as 'Greenworks Dealers'.

	Component or Assembly	Scope of Warranty	Warranty Period
1	Charger	Non-recoverable performance failure or manufacturing error or material reasons	3 years
2	Remote controller/Wheel assembly/ Steering wheel assembly/ Light bar assembly (linkage and support)	Non-recoverable performance failure or manufacturing error or material reasons	1 year
3	Wear-prone plastic parts	Parts subject to normal wear and tear	Excluded from the warranty

SITUATIONS NOT COVERED BY LIMITED WARRANTY:

The following situations are not covered by the limited warranty. The user will be responsible for parts and labor.

1. The product is beyond the service limit or scope specified in the operating instructions.
2. The product becomes faulty or damaged due to the user's failure to comply with the proper usage, driving, and maintenance instructions outlined in the operating manual.
3. The product is faulty or damaged due to rain, ice/snow soaking, smoke, drug, chemical corrosion and force majeure (including but not limited to earthquakes, typhoons, fires, floods, social events, group events and violent crimes).

4. The user makes unauthorized modifications, disassembles the product or its components, or disrupts the normal functioning of the product and its parts.
5. The user's installation of non-original or third-party spare parts or accessories, which results in damage to original parts, or unauthorized modifications to the circuit and line configuration, are not covered by this warranty.
6. The product's faults or damages resulting from incidents such as crashes, rollovers, traffic accidents, overloading (i.e. More than two passengers are strictly prohibited), speeding, or other human-related factors during usage are not covered by this warranty.
7. The user fails to provide a valid invoice, purchase record, or the number on the invoice does not match the product.

HELPLINE:

Warranty service is available by calling our toll-free helpline, at 1-888-909-6757.

TRANSPORTATION CHARGES:

Transportation charges for the movement of any power equipment unit or attachments are the responsibility of the purchaser. It is the purchaser's responsibility to pay transportation charges for any part submitted for replacement under this warranty unless such return is requested in writing by Greenworks.

greenworks[®]

www.greenworksaustralia.com



P0807435-00